

# ROCK SOLID DEPENDABILITY

## ROCK SOLID FEATURES

### Micro Adjust Windage and *RADIALARC* Dials

 
The Micro Adjust Windage and *RADIALARC* Dials allow the shooter to make small, consistent, and accurate adjustments as needed. They are also useful tools for precision sight in.

#### Windage Dial

The laser etched Windage Dial precisely adjusts the pins left and right. (clockwise moves pins left, counter clockwise moves pins right)

#### *RADIALARC* Dial

The laser etched *RADIALARC* Dial precisely adjusts the pins up and down, keeping the bezel square to shooters eye. (clockwise moves pins down, counter clockwise moves pins up)

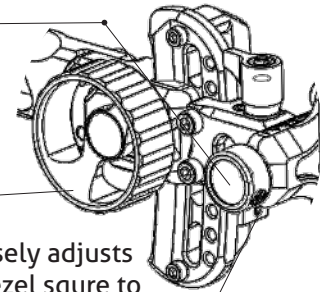

### Adjustable Reset Block for Quick Return

Bump the reset block against the sight body when the sight is sighted in at 20 yards. This will allow the shooter to return to the same spot every time.

### 2nd and 3rd Axis Adjustments

 
Designed to further accommodate shooters sight alignment preferences.

#### 2nd Axis Adjustment

Loosen/Tighten screws to adjust the 2nd axis of the sight.


#### 3rd Axis Adjustment

Loosen/Tighten screw and pivot the level to adjust the 3rd axis of the sight.

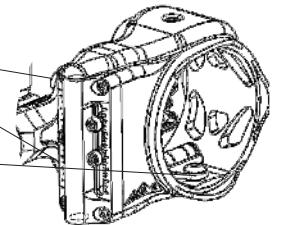

### Built in light adapter

 Use light adapter port to mount an optional light for use in low light situations. Designed to only illuminate the pins, keeping the target sharp in the shooters eye.

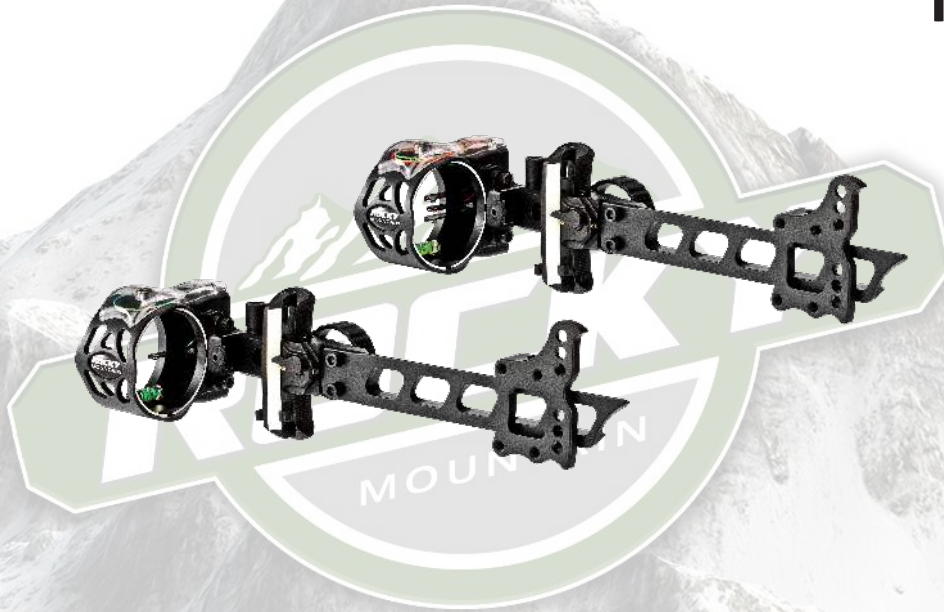

### Mounting

Mount the sight to the bow in one of three positions with the bow mounting screws provided. Set the length of the sight by loosening the set screw on the dovetail bracket. Slide to desired position (8 possible) and tighten set screw.

### Sighting In (20 yards recommended)

Set the top pin in the preferred position in the bezel (using the hex key provided). Next, unlock the Tool Free Locking Knobs, allowing the Micro Adjust Windage and *RADIALARC* Dials to rotate. Rotate the Micro Adjust Windage and *RADIALARC* Dials to precisely tune pin placement. Once pins are in the desired location, lock the Tool Free Locking Knobs.

\* Move pins in the same direction of desired arrow placement.  
i.e. If missing left, adjust pins left. If missing low, move pins down.

AL ALUMINUM BUILT

# ROCK SOLID FEATURES



 
3-PIN



1-PIN

1. Multi-Position Mount/Quiver Holes
2. Multi-Position Dovetail Mount
3. Tool Free Micro-Adjust Windage Dial
4. *RADIALARC* Elevation Dial  
\* Laser Etched Windage and Elevation Markers
5. Tool Free Locking Knobs
6. Adjustable Reset Block for Quick Return
7. 2nd and 3rd Axis Adjustable
8. Pin Adjustment
9. Fully Contained Fibers
10. Built-In Light Adapter

1. Mount Holes  
Quiver Holes

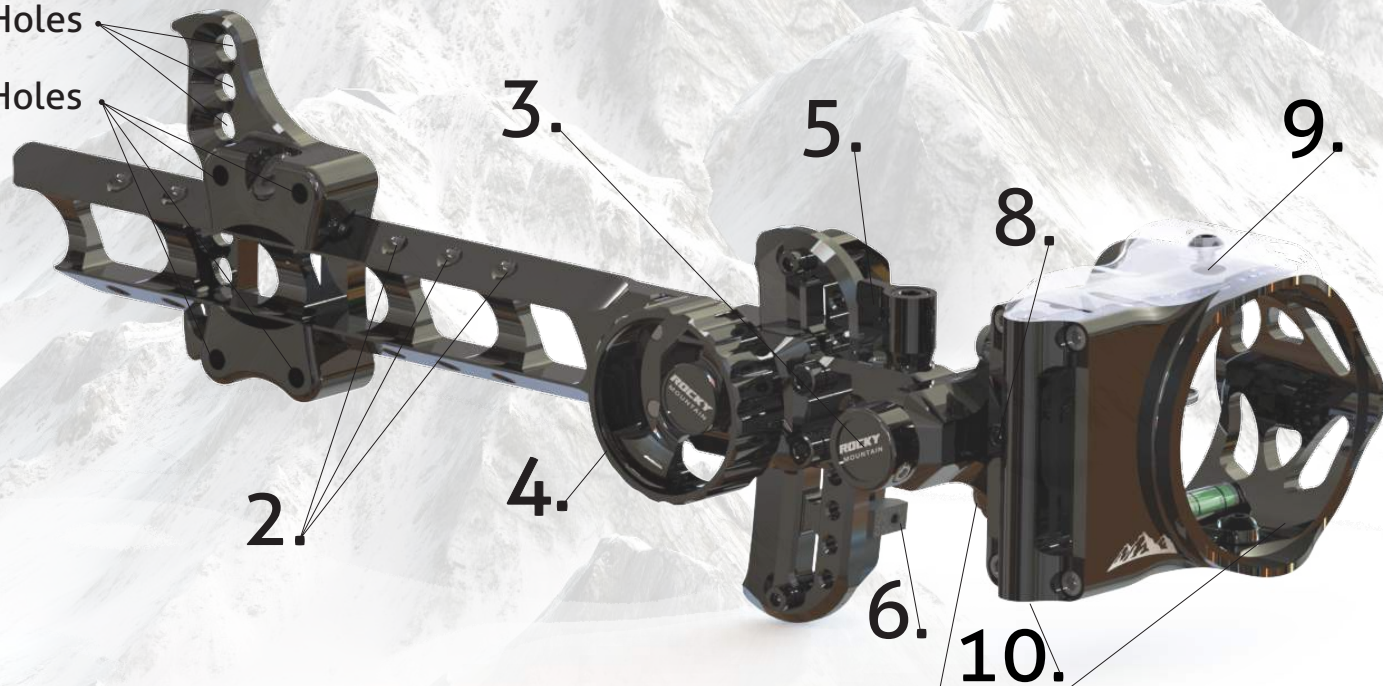

2.

3.

5.

9.

8.

4.

6.

10.

**AL ALUMINUM BUILT**

7. 2nd Axis  
3rd Axis