



INSTRUCTIONS



Center the dot for a perfect shot!

Step 2: Top Pin Adjustment

Set your top pin to your preferred position in the bezel using the hex key provided. (we recommend in the top 1/3 of the bezel)

With both the windage and elevation Tool-Free locking knobs loosened, use the micro



adjustments to sight in your first pin at your preferred distance (we recommend 20 yards), then tighten the Tool-Free locking knobs.



Retina Lock™ Adjustment

a) If you see the green Retina Lock™, adjust the green Retina Lock™ until the black dot is centered within the green Retina Lock™ using the micro adjustments located on the top and top side of sight. Remember you are adjusting the green Retina Lock™ to fit your form/anchor point. Repeat this step until the black dot is centered in the green Retina Lock™ – at your form/anchor point.

Left & Right

Up & Down



center the black dot in the green Retina Lock™ at your form/anchor point. Repeat process as needed. Once your black dot is centered in the green Retina Lock™ AT YOUR FORM/ANCHOR POINT it's time to sight in the rest of your pins!

Optional Features:

Adjustable 2nd Axis used for leveling sight. This adjustment allows you to adjust your sight level while holding your bow at your natural cant. To adjust, loosen screws and adjust to your desired position. Tighten screws.



STOP STOP!!!! DO NOT ADJUST ANY OF THE RETINA MICRO ADJUSTMENTS!!!

IQ PRO Bowsight™ set up instructions:

Step 1: Mounting Sight To Bow


Mount the sight onto your bow with the bow mounting screws provided.



STOP Before beginning Step 3 make sure your top pin is sighted in.

Step 3: Retina Lock™ Adjustment

Once your top pin is accurately sighted in – it's time to adjust your Retina Lock™. Draw your bow using the same form/anchor point used to set your top pin and look for the green Retina Lock™.

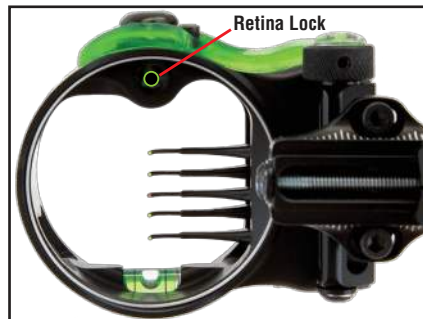

b) If you don't see the green Retina Lock™ at your form/anchor point you will need to move your anchor point up or down and possibly left or right until you find the green Retina Lock™. Once you've determined the direction of the green Retina Lock™, use the micro adjustments located on the top and top side of sight to adjust the green Retina Lock™ to fit your form/anchor point. The micro adjustment on the top of the sight is to move the green Retina Lock™ up and down and the micro adjustment on the top side of sight is to move the green Retina Lock™ left and right – **REMEMBER YOU ARE MOVING THE GREEN** Retina Lock™. Repeat this step until the black dot is centered in the green Retina Lock™ – at your form/anchor point.

HOW TO ADJUST:

If the green Retina Lock™ is high and to the right, you will need to move the adjustment low and to the left to try and

Tool-Free locking knobs which can be removed and replaced with included screws if desired.



For a quick video on how to set up your IQ PRO Bowsight™ please visit:

iqbowsights.com

Tool-Free Locking Knobs

Optional
Bow Mounting
Positions

Optional Quiver
Mounting Holes

Incremental
Windage Micro
Adjust Knob
(.0015 per click)


Incremental
Elevation Micro
Adjust Knob
(.0015 per click)

No Batteries!
Legal in all states

Parts Included:



Retina Lock[™]
Technology

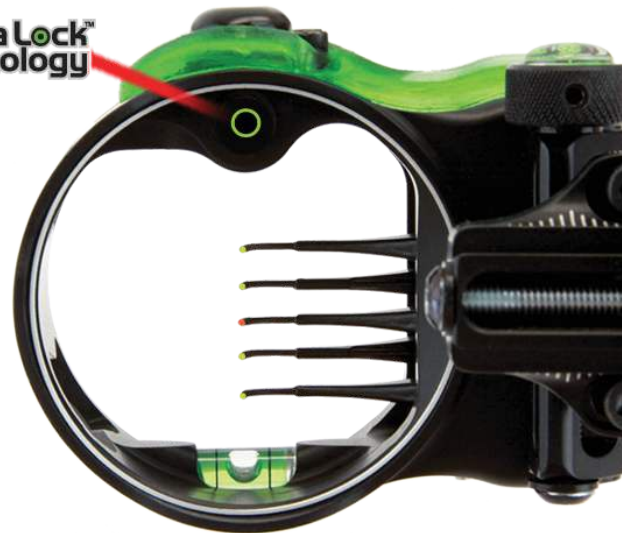

**Revolutionary
Retina Lock[™]
Alignment
Technology –**

Provides instant feedback that will identify even the slightest torque or anchor point change