



# Quick Start Guide

## Covert WC30-A LTE Wireless Camera

1. Insert batteries, SD card, and SIM card into your WC30-A.
2. Switch the camera to SETUP and find the Registration menu screen.
3. Using your cell phone camera, scan the QR code and follow the link to [secure.covert-wireless.com](http://secure.covert-wireless.com)
4. Either Login or create a new account.
5. Once logged in, you will see the IMEI and ICCID populated in the appropriate fields.
6. Choose which AT&T plan you would like the camera added to, and click activate

### Downloading the Mobile App:

Search "**Covert Wireless**" in your Google Play Store or Apple App Store. Be sure to turn on notifications in your phone settings.



### Accessing the Web Portal:

Open your web browser to:

[www.covert-wireless.com](http://www.covert-wireless.com)

*Note: You may cancel your monthly plan anytime by calling 270-743-1515, emailing [support@dlccovert.com](mailto:support@dlccovert.com), or logging into your [secure.covert-wireless.com](http://secure.covert-wireless.com) account.*