


TRYPAN SHOCK COLLAR INSTRUCTIONS

TRYPAN SHOCK COLLAR

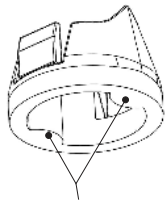

KEYED GROOVE TO LINE UP
WITH BROADHEAD FERRULE

1. CLOSE BROADHEAD BLADES
2. SLIDE SHOCK COLLAR OVER THE THREADED SHAFT OF BROADHEAD
3. ALIGN KEYED SHOCK COLLAR WITH GROOVES ON BROADHEAD FERRULE AND PUSH UP TO BLADES
4. SCREW BROADHEAD ONTO ARROW AND SNUG ARROW TIGHTLY UP TO SHOCK COLLAR